



IEC/EN 60947-4-1

Contactor
 Stykač
 Stykač
 Stycznik
 Contactor
 Leistungsschütz
 Contacteur
 Контактор
 Контактор
 Motorni kontaktor

Mounting instructions

Montážní návod

Montážne inštrukcie

Instrukcja montażu

Instrucțiuni de asamblare

Montageanweisung

Instructions de montage

Инструкция по монтажу

Monteringsanvisning

Istruzioni di montaggio

Instrucciones de montaje

Összeszerelési útmutató

Asennusohjeita

Montage-instructies

Instruções de montagem

Navodila za montažo

Οδηγίες Εγκατάστασης

Инструкции за инсталиране

Monteringsvejledningen

Montažu upute

Surinkimo instrukcijos

Instalēšanas instrukcijas

Скупштина упутство

Paigaldusjuhendid

Caution: Installation by electricians only

Varování: Montáž pouze osobou s elektrotech. kvalifikací

Varovanie: Montáž iba osobou s elektrotech. kvalifikáciou

Uwaga: Montaż tylko przez uprawnionych instalatorów

Atenție: Instalare numai de către electricieni

Vorsicht: Montagenur durch Elektrofachkräfte


Attention: Montage uniquement par un électricien

Осторожно: Монтаж только электриками


NOARK

A




Ex9C09/Ex9C12/Ex9C18



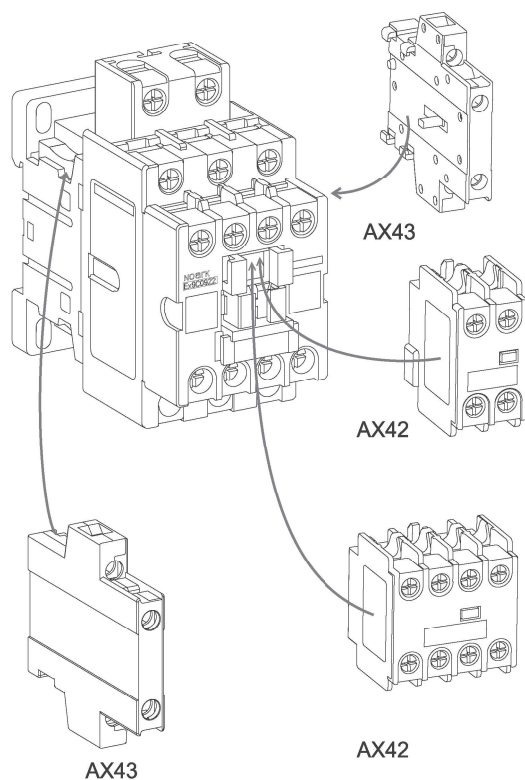


B

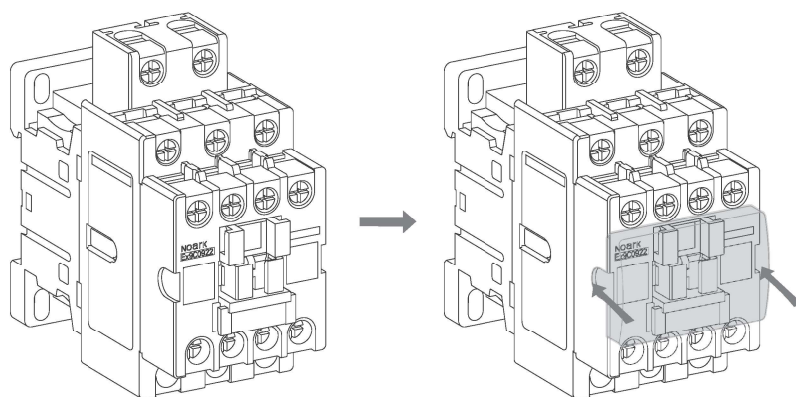

C

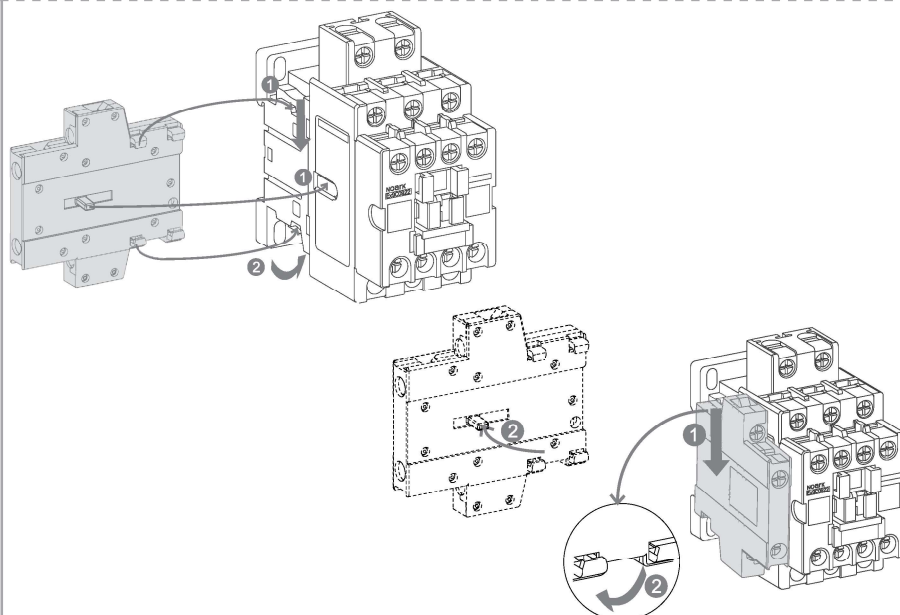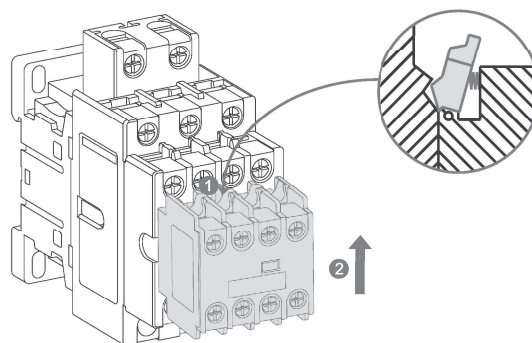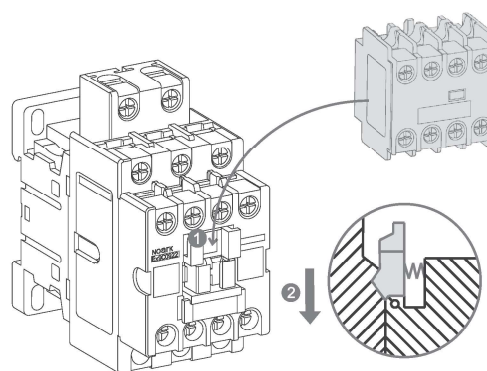

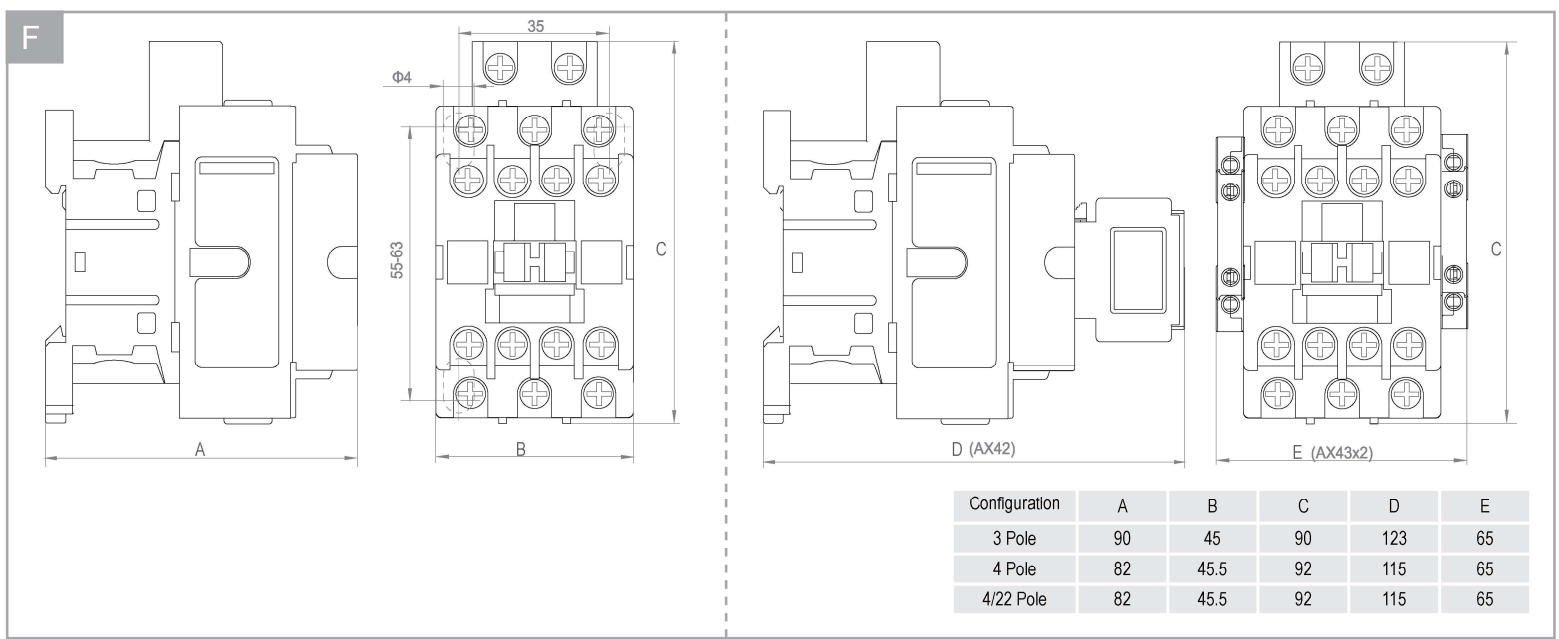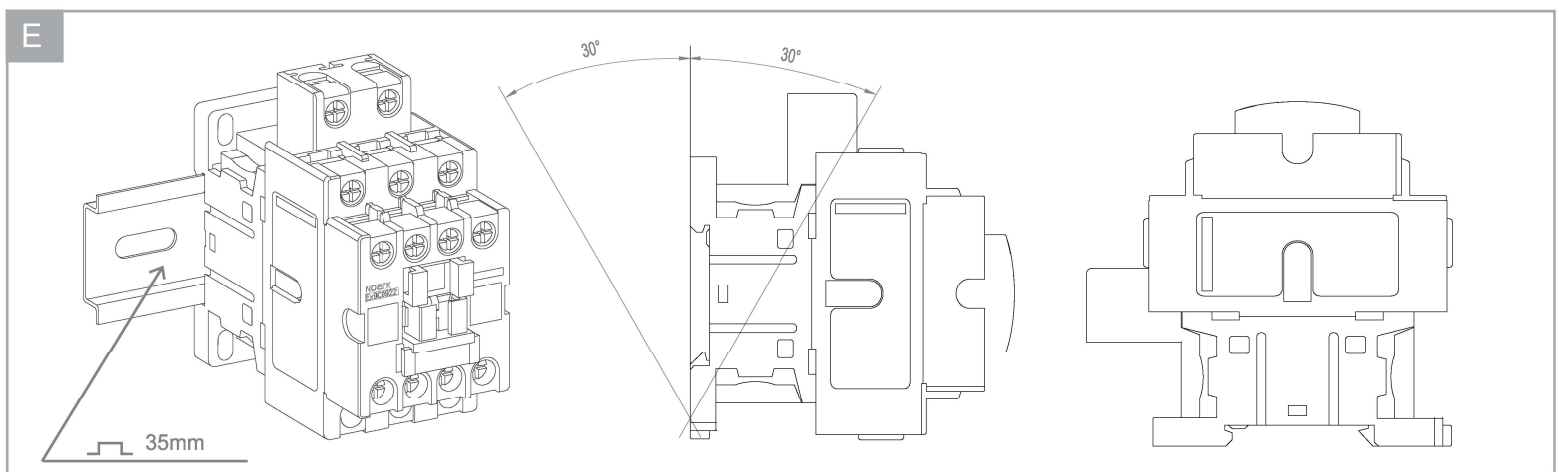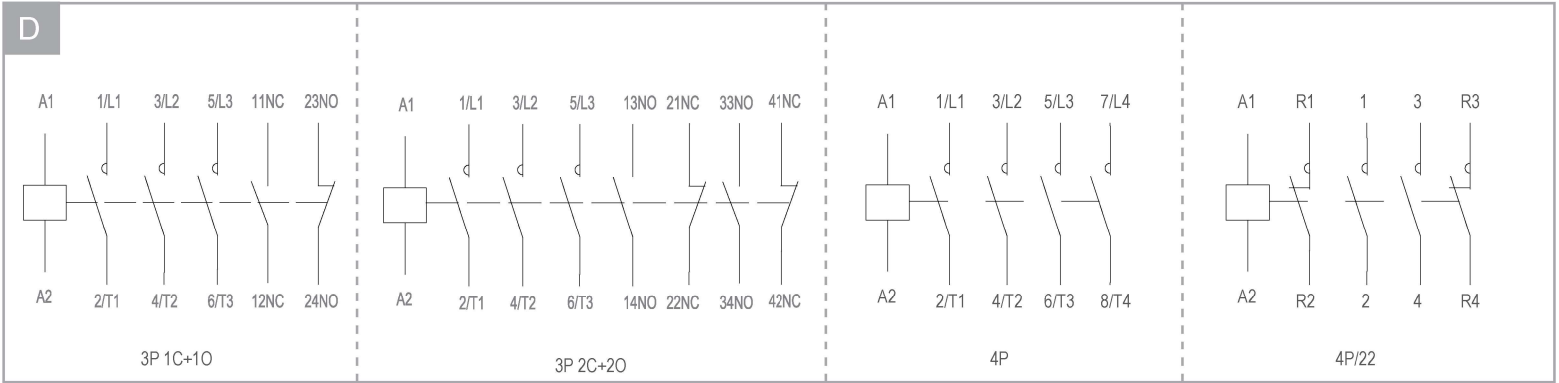

	 1.7N·m	 Z2	 mm ²	 mm ²	 mm ²	 mm ²	 mm ²	 mm ²	 mm ²	 mm ²
			1.5~6	1.5~6	1~6	1~4	1~6	1~4	1.5~6	1.5~6
	 1.7N·m	 Z2	 mm ²	 mm ²	 mm ²	 mm ²	 mm ²	 mm ²	 mm ²	 mm ²
			1~4	1~4	1~4	1~2.5	1~4	1~2.5	1~4	1~4