



## PRODUCT-DETAILS

# 1725-44G-500

## Cover frame 5-gang studio white - Busch-art linear



### General Information

<b>Extended Product Type:</b>	1725-44G-500
<b>Product ID:</b>	2CKA001754A4873
<b>EAN:</b>	4011395321324
<b>Catalog Description:</b>	Cover frame 5-gang studio white - Busch-art linear
<b>Long Description:</b>	For vertical or horizontal installation.
<b>Display Name:</b>	1725-44G-500

### Installation

<b>Instructions and Manuals:</b>	No document needed
<b>Mounting Type:</b>	Flush Mounted
<b>Type of Fastening:</b>	Clamp
<b>Mounting Orientation:</b>	Horizontal Vertical
<b>Modular Components Included:</b>	Cover Frame

---

## Environmental

---

<b>Degree of Protection:</b>	IP20
------------------------------	------

---



---

## Technical

---

<b>Data Sheet, Technical Information:</b>	No document needed
---	--------------------

---

<b>Options Available:</b>	"basic"
---------------------------	---------

---



---

## Design

---

<b>Design Range:</b>	Busch-art linear
----------------------	------------------

---

<b>Design Range Variant:</b>	Busch-art linear
------------------------------	------------------

---

<b>Surface Finishing:</b>	Glossy Untreated
---------------------------	---------------------

---

<b>Material:</b>	Plastic Thermoplastic
------------------	--------------------------

---

<b>Label Space Provided:</b>	Without Label Space
------------------------------	---------------------

---

<b>RAL Number:</b>	Similar to RAL 9016
--------------------	---------------------

---

<b>Color:</b>	studio white
---------------	--------------

---

<b>Number of Gangs:</b>	5-gang
-------------------------	--------

---

<b>Number of Modules:</b>	Horizontal 5 Vertical 5
---------------------------	----------------------------

---



---

## Dimensions

---

<b>Product Net Width:</b>	85 mm
---------------------------	-------

---

<b>Product Net Height:</b>	369.4 mm
----------------------------	----------

---

<b>Product Net Depth / Length:</b>	8.6 mm
------------------------------------	--------

---

<b>Product Net Weight:</b>	49.5 g
----------------------------	--------

---



---

## Material Compliance

---

<b>RoHS Declaration:</b>	2CKA200000E8186
--------------------------	-----------------

---

<b>RoHS Information:</b>	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
--------------------------	--

---

<b>REACH Declaration:</b>	2CKA309999E9999
---------------------------	-----------------

---

<b>REACH Information:</b>	False - does not contain substances > 0.1 mass percentage
---------------------------	---

---

<b>REACH Date:</b>	20260216
--------------------	----------

---

<b>Conflict Minerals Reporting Template (CMRT):</b>	9AKK108468A3363
---	-----------------

---

<b>WEEE Category:</b>	Product Not in WEEE Scope
-----------------------	---------------------------

---

## Certificates and Declarations

Declaration of Conformity - CE: No declaration needed

EU Data Act Applicability and Compliance: Not Applicable

## External Classifications and Standards

ETIM 9: EC000007 - Cover frame for domestic switching devices

ETIM 10: EC000007 - Cover frame for domestic switching devices

eClass: V11.0 : 27144001

## Accessories

Identifier	Description	Type	Qty	Unit Of Measure
2CKA001751A3333	Rocker for Switch/push button, Single rocker studio white - Busch-art linear	1786-44G	1	piece
2CKA001751A3334	Rocker for Switch/push button, Single rocker studio white matt - Busch-art linear	1786-44M	1	piece
2CKA001751A3336	Rocker for Switch/push button, Single rocker black matt - Busch-art linear	1786-45M	1	piece
2CKA001751A3337	Rocker for Switch/push button, Single rocker studio white - Busch-art linear	1786-44G-500	1	piece
2CKA001751A3338	Rocker for Switch/push button, Single rocker studio white matt - Busch-art linear	1786-44M-500	1	piece
2CKA001751A3340	Rocker for Switch/push button, Single rocker black matt - Busch-art linear	1786-45M-500	1	piece
2CKA002013A5489	SCHUKO® socket insert Safety Shutter studio white - Busch-art linear	20 EUCB-44G	1	piece
2CKA002013A5490	SCHUKO® socket insert Safety Shutter studio white matt - Busch-art linear	20 EUCB-44M	1	piece
2CKA002013A5492	SCHUKO® socket insert Safety Shutter black matt - Busch-art linear	20 EUCB-45M	1	piece
2CKA002013A5493	Socket insert Safety Shutter studio white - Busch-art linear	20 EUCB-44G-500	1	piece

2CKA002013A5494	Socket insert Safety Shutter studio white matt - Busch-art linear	20 EUCB-44M-500	1	piece
2CKA002013A5496	Socket insert Safety Shutter black matt - Busch-art linear	20 EUCB-45M-500	1	piece
2CKA001751A3409	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 NWD-44G	1	piece
2CKA001751A3410	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 NWD-44M	1	piece
2CKA001751A3412	Rocker with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 NWD-45M	1	piece
2CKA001751A3341	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white - Busch-art linear	2520 KI-44G	1	piece
2CKA001751A3342	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white matt - Busch-art linear	2520 KI-44M	1	piece
2CKA001751A3344	Rocker with legend Symbol "bell" for Switch/push button, Single rocker black matt - Busch-art linear	2520 KI-45M	1	piece
2CKA001751A3345	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white - Busch-art linear	2520 LI-44G	1	piece
2CKA001751A3346	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white matt - Busch-art linear	2520 LI-44M	1	piece
2CKA001751A3348	Rocker with legend Symbol "light" for Switch/push button, Single rocker black matt - Busch-art linear	2520 LI-45M	1	piece
2CKA001751A3349	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - Busch-art linear	2520 TR-44G	1	piece
2CKA001751A3350	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white matt - Busch-art linear	2520 TR-44M	1	piece

2CKA001751A3352	Rocker with legend Symbol "key" for Switch/push button, Single rocker black matt - Busch-art linear	2520 TR-45M	1	piece
2CKA001731A4021	Rocker with labelling field for Switch/push button, Single rocker studio white - Busch-art linear	1764 N-44G	1	piece
2CKA001731A4022	Rocker with labelling field for Switch/push button, Single rocker studio white matt - Busch-art linear	1764 N-44M	1	piece
2CKA001731A4024	Rocker with labelling field for Switch/push button, Single rocker black matt - Busch-art linear	1764 N-45M	1	piece
2CKA001731A4025	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker studio white - Busch-art linear	1764 N/KI-44G	1	piece
2CKA001731A4026	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker studio white matt - Busch-art linear	1764 N/KI-44M	1	piece
2CKA001731A4028	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker black matt - Busch-art linear	1764 N/KI-45M	1	piece
2CKA001751A3353	Rocker with legend Characters 0 and 1 with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1788-44G	1	piece
2CKA001751A3354	Rocker with legend Characters 0 and 1 with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1788-44M	1	piece
2CKA001751A3356	Rocker with legend Characters 0 and 1 with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1788-45M	1	piece
2CKA001751A3357	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 H-44G	1	piece
2CKA001751A3358	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white matt - Busch -art linear	1789 H-44M	1	piece

2CKA001751A3360	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 H-45M	1	piece
2CKA001751A3361	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 N-44G	1	piece
2CKA001751A3362	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 N-44M	1	piece
2CKA001751A3364	Rocker with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 N-45M	1	piece
2CKA001751A3365	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 N-44G-500	1	piece
2CKA001751A3366	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 N-44M-500	1	piece
2CKA001751A3368	Rocker with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 N-45M-500	1	piece
2CKA001751A3369	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 KI-44G	1	piece
2CKA001751A3370	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 KI-44M	1	piece
2CKA001751A3372	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 KI-45M	1	piece
2CKA001751A3373	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 LI-44G	1	piece

2CKA001751A3374	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 LI-44M	1	piece
2CKA001751A3376	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 LI-45M	1	piece
2CKA001751A3377	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 TR-44G	1	piece
2CKA001751A3378	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 TR-44M	1	piece
2CKA001751A3380	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 TR-45M	1	piece
2CKA001751A3381	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Busch-art linear	1789 ST-44G	1	piece
2CKA001751A3382	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Busch-art linear	1789 ST-44M	1	piece
2CKA001751A3384	Rocker with legend Symbol "Socket" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Busch-art linear	1789 ST-45M	1	piece
2CKA001751A3305	Rocker with Small Transparent Calotte for Switch/push button, Two -part rocker studio white - Busch-art linear	1785 K-44G	1	piece
2CKA001751A3306	Rocker with Small Transparent Calotte for Switch/push button, Two -part rocker studio white matt - Busch-art linear	1785 K-44M	1	piece
2CKA001751A3308	Rocker with Small Transparent Calotte for Switch/push button, Two -part rocker black matt - Busch-art linear	1785 K-45M	1	piece

2CKA001751A3385	Rocker for Switch/push button, Two-part rocker studio white - Busch-art linear	1785-44G	1	piece
2CKA001751A3386	Rocker for Switch/push button, Two-part rocker studio white matt - Busch-art linear	1785-44M	1	piece
2CKA001751A3388	Rocker for Switch/push button, Two-part rocker black matt - Busch-art linear	1785-45M	1	piece
2CKA001751A3389	Rocker for Switch/push button, Two-part rocker studio white - Busch-art linear	1785-44G-500	1	piece
2CKA001751A3390	Rocker for Switch/push button, Two-part rocker studio white matt - Busch-art linear	1785-44M-500	1	piece
2CKA001751A3392	Rocker for Switch/push button, Two-part rocker black matt - Busch-art linear	1785-45M-500	1	piece
2CKA001751A3393	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white - Busch-art linear	1785 JA-44G	1	piece
2CKA001751A3394	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white matt - Busch-art linear	1785 JA-44M	1	piece
2CKA001751A3396	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker black matt - Busch-art linear	1785 JA-45M	1	piece
2CKA001751A3397	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white - Busch-art linear	1785 JA-44G-500	1	piece
2CKA001751A3398	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white matt - Busch-art linear	1785 JA-44M-500	1	piece
2CKA001751A3400	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker black matt - Busch-art linear	1785 JA-45M-500	1	piece
2CKA002011A6316	SCHUKO® USB socket insert Safety Shutter with USB A/C studio white - Busch-art linear	20 EUCB2USBAC-44G	1	piece
2CKA002011A6318	SCHUKO® USB socket insert Safety Shutter with USB A/C studio white matt - Busch-art linear	20 EUCB2USBAC-44M	1	piece

2CKA002011A6322	SCHUKO® USB socket insert Safety Shutter with USB A/C black matt - Busch-art linear	20 EUCB2USBAC-45M	1	piece
2CKA002013A5521	SCHUKO® socket insert flat Safety Shutter studio white - Busch-art linear	20-1 EUCBF-44G	1	piece
2CKA002013A5522	SCHUKO® socket insert flat Safety Shutter studio white matt - Busch-art linear	20-1 EUCBF-44M	1	piece
2CKA002013A5524	SCHUKO® socket insert flat Safety Shutter black matt - Busch-art linear	20-1 EUCBF-45M	1	piece
2CKA002013A5525	Socket insert Safety Shutter studio white - Busch-art linear	20-1 EUCBF-44G-500	1	piece
2CKA002013A5526	Socket insert Safety Shutter studio white matt - Busch-art linear	20-1 EUCBF-44M-500	1	piece
2CKA002013A5528	Socket insert Safety Shutter black matt - Busch-art linear	20-1 EUCBF-45M-500	1	piece
2CKA002017A1905	Socket insert flat with earthing pin Safety Shutter studio white - Busch-art linear	20-1 MUCB-44G	1	piece
2CKA002017A1906	Socket insert flat with earthing pin Safety Shutter studio white matt - Busch-art linear	20-1 MUCB-44M	1	piece
2CKA002017A1908	Socket insert flat with earthing pin Safety Shutter black matt - Busch-art linear	20-1 MUCB-45M	1	piece
2CKA002013A5497	SCHUKO® socket insert Safety Shutter without claw studio white - Busch-art linear	20 EUCRB-44G	1	piece
2CKA002013A5498	SCHUKO® socket insert Safety Shutter without claw studio white matt - Busch-art linear	20 EUCRB-44M	1	piece
2CKA002013A5500	SCHUKO® socket insert Safety Shutter without claw black matt - Busch-art linear	20 EUCRB-45M	1	piece
2CKA002013A5501	Socket insert Safety Shutter without claw studio white - Busch-art linear	20 EUCRB-44G-500	1	piece
2CKA002013A5502	Socket insert Safety Shutter without claw studio white matt - Busch-art linear	20 EUCRB-44M-500	1	piece
2CKA002013A5504	Socket insert Safety Shutter without claw black matt - Busch-art linear	20 EUCRB-45M-500	1	piece

2CKA002013A5505	SCHUKO® socket insert Safety Shutter with screw terminals studio white - Busch-art linear	23 EUCB-44G	1	piece
2CKA002013A5506	SCHUKO® socket insert Safety Shutter with screw terminals studio white matt - Busch-art linear	23 EUCB-44M	1	piece
2CKA002013A5508	SCHUKO® socket insert Safety Shutter with screw terminals black matt - Busch-art linear	23 EUCB-45M	1	piece
2CKA002013A5509	SCHUKO® socket insert Safety Shutter with label space studio white - Busch-art linear	20 EUCNB-44G	1	piece
2CKA002013A5510	SCHUKO® socket insert Safety Shutter with label space studio white matt - Busch-art linear	20 EUCNB-44M	1	piece
2CKA002013A5512	SCHUKO® socket insert Safety Shutter with label space black matt - Busch- art linear	20 EUCNB-45M	1	piece
2CKA002013A5513	SCHUKO® socket insert Safety Shutter with LED Control light /Green studio white - Busch-art linear	20 EUCBL-44G	1	piece
2CKA002013A5514	SCHUKO® socket insert Safety Shutter with LED Control light /Green studio white matt - Busch -art linear	20 EUCBL-44M	1	piece
2CKA002013A5516	SCHUKO® socket insert Safety Shutter with LED Control light /Green black matt - Busch-art linear	20 EUCBL-45M	1	piece
2CKA002018A1579	SCHUKO® socket insert Safety Shutter with Hinged Lid without claw studio white - Busch-art linear	20 EUKBR-44G	1	piece
2CKA002018A1580	SCHUKO® socket insert Safety Shutter with Hinged Lid without claw studio white matt - Busch -art linear	20 EUKBR-44M	1	piece
2CKA002018A1582	SCHUKO® socket insert Safety Shutter with Hinged Lid without claw black matt - Busch-art linear	20 EUKBR-45M	1	piece
2CKA002013A5517	Busch-steplight® SCHUKO® socket insert Safety Shutter with LED Night light /White studio white - Busch-art linear	20 EUCBLI-44G	1	piece

2CKA002013A5518	Busch-steplight® SCHUKO® socket insert Safety Shutter with LED Night light /White studio white matt - Busch-art linear	20 EUCBLI-44M	1	piece
2CKA002013A5520	Busch-steplight® SCHUKO® socket insert Safety Shutter with LED Night light /White black matt - Busch-art linear	20 EUCBLI-45M	1	piece
2CKA002018A1575	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white - Busch-art linear	20 EUKB-44G	1	piece
2CKA002018A1576	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white matt - Busch-art linear	20 EUKB-44M	1	piece
2CKA002018A1578	SCHUKO® socket insert Safety Shutter with Hinged Lid black matt - Busch-art linear	20 EUKB-45M	1	piece
2CKA002017A1909	Socket insert with earthing pin Safety Shutter with Hinged Lid studio white - Busch-art linear	20-1 MUCBK-44G	1	piece
2CKA002017A1910	Socket insert with earthing pin Safety Shutter with Hinged Lid studio white matt - Busch -art linear	20-1 MUCBK-44M	1	piece
2CKA002017A1912	Socket insert with earthing pin Safety Shutter with Hinged Lid black matt - Busch-art linear	20-1 MUCBK-45M	1	piece
2CKA001763A0032	Sealing Set with Sealing Ring transparent - Busch- art linear	20 WD-4X	1	piece
2CKA001710A4141	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button studio white - Busch-art linear	1740-44G	1	piece
2CKA001710A4142	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button studio white matt - Busch-art linear	1740-44M	1	piece
2CKA001710A4144	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button black matt - Busch -art linear	1740-45M	1	piece
2CKA006599A3052	Cover plate for Dimmer Turn button with Neon lamp studio white - Busch -art linear	6540-44G-102	1	piece

2CKA006599A3053	Cover plate for Dimmer Turn button with Neon lamp studio white matt - Busch-art linear	6540-44M-102	1	piece
2CKA006599A3055	Cover plate for Dimmer Turn button with Neon lamp black matt - Busch-art linear	6540-45M-102	1	piece
2CKA006599A3056	Cover plate for Dimmer Turn button with Neon lamp studio white - Busch-art linear	6540-44G-102-500	1	piece
2CKA006599A3057	Cover plate for Dimmer Turn button with Neon lamp studio white matt - Busch-art linear	6540-44M-102-500	1	piece
2CKA006599A3059	Cover plate for Dimmer Turn button with Neon lamp black matt - Busch-art linear	6540-45M-102-500	1	piece
2CKA006155A0122	Cover plate Symbols "up, down, ECO, menu" for Room temperature controller white - Busch-art linear	6109/03-44G	1	piece
2CKA006155A0123	Cover plate Symbols "up, down, ECO, menu" for Room temperature controller white - Busch-art linear	6109/03-44M	1	piece
2CKA006155A0125	Cover plate Symbols "up, down, ECO, menu" for Room temperature controller black - Busch-art linear	6109/03-45M	1	piece
2CKA006155A0126	Cover plate Symbols "up, down, ECO, menu" for Room temperature controller white - Busch-art linear	6109/03-44G-500	1	piece
2CKA006155A0127	Cover plate Symbols "up, down, ECO, menu" for Room temperature controller white - Busch-art linear	6109/03-44M-500	1	piece
2CKA006155A0129	Cover plate Symbols "up, down, ECO, menu" for Room temperature controller black - Busch-art linear	6109/03-45M-500	1	piece
2CKA006220A0920	Cover plate Symbols "up, down, ECO, Power" 2gang studio white - Busch-art linear	6235-44G	1	piece
2CKA006220A0921	Cover plate Symbols "up, down, ECO, Power" 2gang studio white matt - Busch-art linear	6235-44M	1	piece
2CKA006220A0923	Cover plate Symbols "up, down, ECO, Power" 2gang black matt - Busch-art linear	6235-45M	1	piece

2CKA001710A4206	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button studio white matt - Busch-art linear	1794 R-44M	1	piece
2CKA001710A4207	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button studio white - Busch-art linear	1794 R-44G	1	piece
2CKA001710A4208	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button black matt - Busch-art linear	1794 R-45M	1	piece
2CKA006430A0426	Cover Plate, Thermostat Symbols "temp up/down, Power, left, menu, right" 6gang for Room temperature controller Central cover plate studio white - Busch-art linear	1794 MDRT-44G	1	piece
2CKA006430A0425	Cover Plate, Thermostat Symbols "temp up/down, Power, left, menu, right" 6gang for Room temperature controller Central cover plate studio white matt - Busch-art linear	1794 MDRT-44M	1	piece
2CKA006430A0427	Cover Plate, Thermostat Symbols "temp up/down, Power, left, menu, right" 6gang for Room temperature controller Central cover plate black matt - Busch-art linear	1794 MDRT-45M	1	piece
2CKA006800A3136	Busch-Watchdog 180 flex Cover plate Movement sensor white - Busch-art linear	64764-44G	1	piece
2CKA006800A3137	Busch-Watchdog 180 flex Cover plate Movement sensor white - Busch-art linear	64764-44M	1	piece
2CKA006800A3139	Busch-Watchdog 180 flex Cover plate Movement sensor black - Busch-art linear	64764-45M	1	piece
2CKA006800A3140	Cover plate Movement sensor white - Busch-art linear	64764-44G-500	1	piece
2CKA006800A3141	Cover plate Movement sensor white - Busch-art linear	64764-44M-500	1	piece
2CKA006800A3143	Cover plate Movement sensor black - Busch-art linear	64764-45M-500	1	piece
2CKA006800A3120	Busch-Watchdog 180 flex Cover plate Movement sensor white - Busch-art linear	64761-44G	1	piece

2CKA006800A3121	Busch-Watchdog 180 flex Cover plate Movement sensor white - Busch-art linear	64761-44M	1	piece
2CKA006800A3123	Busch-Watchdog 180 flex Cover plate Movement sensor black - Busch-art linear	64761-45M	1	piece
2CKA006800A3124	Busch-Watchdog Cover plate Movement sensor white - Busch-art linear	64761-44G-500	1	piece
2CKA006800A3125	Busch-Watchdog Cover plate Movement sensor white - Busch-art linear	64761-44M-500	1	piece
2CKA006800A3127	Busch-Watchdog Cover plate Movement sensor black - Busch-art linear	64761-45M-500	1	piece
2CKA001751A3309	Rocker with legend DND, MUR with Small Transparent Calotte for Switch/push button, Two -part rocker studio white - Busch-art linear	1785/11 K-44G	1	piece
2CKA001751A3310	Rocker with legend DND, MUR with Small Transparent Calotte for Switch/push button, Two -part rocker studio white matt - Busch-art linear	1785/11 K-44M	1	piece
2CKA001751A3312	Rocker with legend DND, MUR with Small Transparent Calotte for Switch/push button, Two -part rocker black matt - Busch-art linear	1785/11 K-45M	1	piece
2CKA001751A3401	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1P with LED studio white - Busch-art linear	2029/12 UC-44G	1	piece
2CKA001751A3402	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1P with LED studio white matt - Busch-art linear	2029/12 UC-44M	1	piece
2CKA001751A3404	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1P with LED black matt - Busch-art linear	2029/12 UC-45M	1	piece
2CKA001751A3405	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1P with LED 1NO studio white - Busch-art linear	2029 UC-44G	1	piece
2CKA001751A3406	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1P with LED 1NO studio white matt - Busch -art linear	2029 UC-44M	1	piece

2CKA001751A3408	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1P with LED 1NO black matt - Busch-art linear	2029 UC-45M	1	piece
2CKA001710A4240	Cover plate with legend Card, Symbol "arrows" 2-pole push button 2P with LED Orientation light 1NO studio white - Busch-art linear	1792 U-44G	1	piece
2CKA001710A4241	Cover plate with legend Card, Symbol "arrows" 2-pole push button 2P with LED Orientation light 1NO studio white matt - Busch-art linear	1792 U-44M	1	piece
2CKA001710A4243	Cover plate with legend Card, Symbol "arrows" 2-pole push button 2P with LED Orientation light 1NO black matt - Busch-art linear	1792 U-45M	1	piece
2CKA001710A4244	Cover plate with legend Card, Symbol "arrows" for Card switch RFID Hotel card studio white - Busch-art linear	1792 RFID-44G	1	piece
2CKA001710A4245	Cover plate with legend Card, Symbol "arrows" for Card switch RFID Hotel card studio white matt - Busch-art linear	1792 RFID-44M	1	piece
2CKA001710A4247	Cover plate with legend Card, Symbol "arrows" for Card switch RFID Hotel card black matt - Busch-art linear	1792 RFID-45M	1	piece
2CKA001751A3313	Rocker with legend DND, MUR with Small Transparent Calotte for Switch/push button Two-part rocker studio white - Busch-art linear	2058-24-44G	1	piece
2CKA001751A3314	Rocker with legend DND, MUR with Small Transparent Calotte for Switch/push button Two-part rocker studio white matt - Busch-art linear	2058-24-44M	1	piece
2CKA001751A3316	Rocker with legend DND, MUR with Small Transparent Calotte for Switch/push button Two-part rocker black matt - Busch-art linear	2058-24-45M	1	piece
2CKA001751A3317	Rocker for Electronic push button Two-part rocker studio white - Busch-art linear	2570-20-44G	1	piece

2CKA001751A3318	Rocker for Electronic push2570-20-44M button Two-part rocker studio white matt - Busch -art linear		1	piece
2CKA001751A3320	Rocker for Electronic push2570-20-45M button Two-part rocker black matt - Busch-art linear		1	piece
2CKA001751A3321	Bell push-switch DND / 2059 UC-44G MUR insert DND, MUR and Symbol "bell" 1gang Single push button with LED 1 rocker studio white - Busch-art linear		1	piece
2CKA001751A3322	Bell push-switch DND / 2059 UC-44M MUR insert DND, MUR and Symbol "bell" 1gang Single push button with LED 1 rocker studio white matt - Busch-art linear		1	piece
2CKA001751A3324	Bell push-switch DND / 2059 UC-45M MUR insert DND, MUR and Symbol "bell" 1gang Single push button with LED 1 rocker black matt - Busch-art linear		1	piece
2CKA001751A3325	Rocker for Electronic push2570-10-44G button Single rocker studio white - Busch-art linear		1	piece
2CKA001751A3326	Rocker for Electronic push2570-10-44M button Single rocker studio white matt - Busch -art linear		1	piece
2CKA001751A3328	Rocker for Electronic push2570-10-45M button Single rocker black matt - Busch-art linear		1	piece
2CKA001751A3329	Rocker for Electronic push2570-30-44G button Three-part rocker studio white - Busch-art linear		1	piece
2CKA001751A3330	Rocker for Electronic push2570-30-44M button Three-part rocker studio white matt - Busch -art linear		1	piece
2CKA001751A3332	Rocker for Electronic push2570-30-45M button Three-part rocker black matt - Busch-art linear		1	piece
2CKA001751A3413	Rocker for Smart switch 6735 BT-44G Single rocker studio white - Busch-art linear		1	piece
2CKA001751A3414	Rocker for Smart switch 6735 BT-44M Single rocker studio white matt - Busch-art linear		1	piece
2CKA001751A3416	Rocker for Smart switch 6735 BT-45M Single rocker black matt - Busch-art linear		1	piece
2CKA006730A0166	Rocker for Smart switch 6736 FoH-44G Two-part rocker studio white - Busch-art linear		1	piece

2CKA006730A0167	Rocker for Smart switch Two-part rocker studio white matt - Busch-art linear	6736 FoH-44M	1	piece
2CKA006730A0169	Rocker for Smart switch Two-part rocker black matt - Busch-art linear	6736 FoH-45M	1	piece
2CKA001710A4137	Cover plate with legend Loudspeaker Turn button studio white - Busch-art linear	1740 DR/03-44G	1	piece
2CKA001710A4138	Cover plate with legend Loudspeaker Turn button studio white matt - Busch -art linear	1740 DR/03-44M	1	piece
2CKA001710A4140	Cover plate with legend Loudspeaker Turn button black matt - Busch-art linear	1740 DR/03-45M	1	piece
2CKA001710A4145	Cover plate Symbol "2-1-3" for Level switch, Turn button studio white - Busch-art linear	1740 DRL-44G-503	1	piece
2CKA001710A4146	Cover plate Symbol "2-1-3" for Level switch, Turn button studio white matt - Busch-art linear	1740 DRL-44M-503	1	piece
2CKA001710A4148	Cover plate Symbol "2-1-3" for Level switch, Turn button black matt - Busch -art linear	1740 DRL-45M-503	1	piece
2CKA001753A9978	Cover plate with legend 0 ... 120 Min for Time switch, Turning handle studio white - Busch-art linear	1771-44G-103	1	piece
2CKA001753A9979	Cover plate with legend 0 ... 120 Min for Time switch, Turning handle studio white matt - Busch -art linear	1771-44M-103	1	piece
2CKA001753A9981	Cover plate with legend 0 ... 120 Min for Time switch, Turning handle black matt - Busch-art linear	1771-45M-103	1	piece
2CKA001753A9982	Cover plate with legend 0 ... 15 Min for Time switch, Turning handle studio white - Busch-art linear	1770-44G-103	1	piece
2CKA001753A9983	Cover plate with legend 0 ... 15 Min for Time switch, Turning handle studio white matt - Busch -art linear	1770-44M-103	1	piece
2CKA001753A9985	Cover plate with legend 0 ... 15 Min for Time switch, Turning handle black matt - Busch-art linear	1770-45M-103	1	piece

2CKA001710A4149	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button studio white - Busch-art linear	2542 DR/01-44G	1	piece
2CKA001710A4150	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button studio white matt - Busch -art linear	2542 DR/01-44M	1	piece
2CKA001710A4152	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button black matt - Busch-art linear	2542 DR/01-45M	1	piece
2CKA001710A4157	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key studio white - Busch-art linear	1755 SL/PZ-44G	1	piece
2CKA001710A4158	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key studio white matt - Busch -art linear	1755 SL/PZ-44M	1	piece
2CKA001710A4160	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key black matt - Busch-art linear	1755 SL/PZ-45M	1	piece
2CKA001710A4153	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button studio white - Busch-art linear	2542 DR/02-44G	1	piece
2CKA001710A4154	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button studio white matt - Busch -art linear	2542 DR/02-44M	1	piece
2CKA001710A4156	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button black matt - Busch-art linear	2542 DR/02-45M	1	piece
2CKA008200A0285	Cover plate with legend Busch-Radio Radio white - Busch-art linear	8252-44G-101	1	piece
2CKA008200A0286	Cover plate with legend Busch-Radio Radio white - Busch-art linear	8252-44M-101	1	piece
2CKA008200A0288	Cover plate with legend Busch-Radio Radio black - Busch-art linear	8252-45M-101	1	piece
2CKA008200A0289	Cover plate Loudspeaker white - Busch-art linear	8253-44G	1	piece
2CKA008200A0291	Cover plate Loudspeaker black - Busch-art linear	8253-45G	1	piece

2CKA006430A0450	Cover plate with legend Symbols "play, up, down, ok" for Time switch, Room temperature controller, CO2-sensor Central cover plate studio white - Busch-art linear	6435-44G	1	piece
2CKA006430A0451	Cover plate with legend Symbols "play, up, down, ok" for Time switch, Room temperature controller, CO2-sensor Central cover plate studio white matt - Busch-art linear	6435-44M	1	piece
2CKA006430A0453	Cover plate with legend Symbols "play, up, down, ok" for Time switch, Room temperature controller, CO2-sensor Central cover plate black matt - Busch-art linear	6435-45M	1	piece
2CKA006220A0924	Rocker 1gang studio white - Busch-art linear	6230-10-44G	1	piece
2CKA006220A0925	Rocker 1gang studio white matt - Busch-art linear	6230-10-44M	1	piece
2CKA006220A0927	Rocker 1gang black matt - Busch-art linear	6230-10-45M	1	piece
2CKA006220A0928	Rocker Symbol "light" 1gang studio white - Busch-art linear	6231-10-44G	1	piece
2CKA006220A0929	Rocker Symbol "light" 1gang studio white matt - Busch-art linear	6231-10-44M	1	piece
2CKA006220A0931	Rocker Symbol "light" 1gang black matt - Busch-art linear	6231-10-45M	1	piece
2CKA006220A0932	Rocker Symbol "dimming" 1gang studio white - Busch-art linear	6234-10-44G	1	piece
2CKA006220A0933	Rocker Symbol "dimming" 1gang studio white matt - Busch-art linear	6234-10-44M	1	piece
2CKA006220A0935	Rocker Symbol "dimming" 1gang black matt - Busch-art linear	6234-10-45M	1	piece
2CKA006220A0936	Rocker Symbol "venetian blind" 1gang studio white - Busch-art linear	6232-10-44G	1	piece
2CKA006220A0937	Rocker Symbol "venetian blind" 1gang studio white matt - Busch-art linear	6232-10-44M	1	piece
2CKA006220A0939	Rocker Symbol "venetian blind" 1gang black matt - Busch-art linear	6232-10-45M	1	piece
2CKA006220A0940	Rocker Symbol "scene" 1gang studio white - Busch-art linear	6233-10-44G	1	piece

2CKA006220A0941	Rocker Symbol "scene" 1gang studio white matt - Busch-art linear	6233-10-44M	1	piece
2CKA006220A0943	Rocker Symbol "scene" 1gang black matt - Busch-art linear	6233-10-45M	1	piece
2CKA006220A0944	Rocker 2gang studio white - Busch-art linear	6230-20-44G	1	piece
2CKA006220A0945	Rocker 2gang studio white matt - Busch-art linear	6230-20-44M	1	piece
2CKA006220A0947	Rocker 2gang black matt - Busch-art linear	6230-20-45M	1	piece
2CKA006220A0948	Rocker Symbol "light" 2gang studio white - Busch-art linear	6231-21-44G	1	piece
2CKA006220A0949	Rocker Symbol "light" 2gang studio white matt - Busch-art linear	6231-21-44M	1	piece
2CKA006220A0951	Rocker Symbol "light" 2gang black matt - Busch-art linear	6231-21-45M	1	piece
2CKA006220A0952	Rocker Symbol "light" 2gang studio white - Busch-art linear	6231-22-44G	1	piece
2CKA006220A0953	Rocker Symbol "light" 2gang studio white matt - Busch-art linear	6231-22-44M	1	piece
2CKA006220A0955	Rocker Symbol "light" 2gang black matt - Busch-art linear	6231-22-45M	1	piece
2CKA006220A0956	Rocker Symbol "dimming" 2gang studio white - Busch-art linear	6234-21-44G	1	piece
2CKA006220A0957	Rocker Symbol "dimming" 2gang studio white matt - Busch-art linear	6234-21-44M	1	piece
2CKA006220A0959	Rocker Symbol "dimming" 2gang black matt - Busch-art linear	6234-21-45M	1	piece
2CKA006220A0960	Rocker Symbol "dimming" 2gang studio white - Busch-art linear	6234-22-44G	1	piece
2CKA006220A0961	Rocker Symbol "dimming" 2gang studio white matt - Busch-art linear	6234-22-44M	1	piece
2CKA006220A0963	Rocker Symbol "dimming" 2gang black matt - Busch-art linear	6234-22-45M	1	piece
2CKA006220A0964	Rocker Symbol "venetian blind" 2gang studio white - Busch-art linear	6232-20-44G	1	piece
2CKA006220A0965	Rocker Symbol "venetian blind" 2gang studio white matt - Busch-art linear	6232-20-44M	1	piece
2CKA006220A0967	Rocker Symbol "venetian blind" 2gang black matt - Busch-art linear	6232-20-45M	1	piece

2CKA006220A0968	Rocker Symbol "scene" 2gang studio white - Busch-art linear	6233-21-44G	1	piece
2CKA006220A0969	Rocker Symbol "scene" 2gang studio white matt - Busch-art linear	6233-21-44M	1	piece
2CKA006220A0971	Rocker Symbol "scene" 2gang black matt - Busch- art linear	6233-21-45M	1	piece
2CKA006220A0972	Rocker Symbol "scene" 2gang studio white - Busch-art linear	6233-22-44G	1	piece
2CKA006220A0973	Rocker Symbol "scene" 2gang studio white matt - Busch-art linear	6233-22-44M	1	piece
2CKA006220A0975	Rocker Symbol "scene" 2gang black matt - Busch- art linear	6233-22-45M	1	piece
2CKA006220A0976	Rocker Symbols "music control" 2gang studio white - Busch-art linear	6237-21-44G	1	piece
2CKA006220A0977	Rocker Symbols "music control" 2gang studio white matt - Busch-art linear	6237-21-44M	1	piece
2CKA006220A0979	Rocker Symbols "music control" 2gang black matt - Busch-art linear	6237-21-45M	1	piece
2CKA006220A0980	Rocker Symbols "music control" 2gang studio white - Busch-art linear	6237-22-44G	1	piece
2CKA006220A0981	Rocker Symbols "music control" 2gang studio white matt - Busch-art linear	6237-22-44M	1	piece
2CKA006220A0983	Rocker Symbols "music control" 2gang black matt - Busch-art linear	6237-22-45M	1	piece
2CKA006200A0298	Cover plate Movement sensor Wireless white - Busch-art linear	62762-44G-WL	1	piece
2CKA006200A0299	Cover plate Movement sensor Wireless white - Busch-art linear	62762-44M-WL	1	piece
2CKA006200A0301	Cover plate Movement sensor Wireless black - Busch-art linear	62762-45M-WL	1	piece
2CKA006200A0302	Cover plate Movement sensor Wireless white - Busch-art linear	62762-44G-WL-500	1	piece
2CKA006200A0303	Cover plate Movement sensor Wireless white - Busch-art linear	62762-44M-WL-500	1	piece
2CKA006200A0305	Cover plate Movement sensor Wireless black - Busch-art linear	62762-45M-WL-500	1	piece

2CKA006800A3128	Busch-Watchdog 180 flex Cover plate Movement sensor white - Busch-art linear	64762-44G	1	piece
2CKA006800A3129	Busch-Watchdog 180 flex Cover plate Movement sensor white - Busch-art linear	64762-44M	1	piece
2CKA006800A3131	Busch-Watchdog 180 flex Cover plate Movement sensor black - Busch-art linear	64762-45M	1	piece
2CKA006800A3132	Busch-Watchdog Cover plate Movement sensor white - Busch-art linear	64762-44G-500	1	piece
2CKA006800A3133	Busch-Watchdog Cover plate Movement sensor white - Busch-art linear	64762-44M-500	1	piece
2CKA006800A3135	Busch-Watchdog Cover plate Movement sensor black - Busch-art linear	64762-45M-500	1	piece
2CKA006200A0307	Cover plate Enrolment device Wireless white - Busch-art linear	62764-44G-WL	1	piece
2CKA006200A0308	Cover plate Enrolment device Wireless white - Busch-art linear	62764-44M-WL	1	piece
2CKA006200A0310	Cover plate Enrolment device Wireless black - Busch-art linear	62764-45M-WL	1	piece
2CKA006200A0311	Cover plate Enrolment device Wireless white - Busch-art linear	62764-44G-WL-500	1	piece
2CKA006200A0312	Cover plate Enrolment device Wireless white - Busch-art linear	62764-44M-WL-500	1	piece
2CKA006200A0314	Cover plate Enrolment device Wireless black - Busch-art linear	62764-45M-WL-500	1	piece
2CKA006800A3144	Busch-Comfort switch® flex Control Element Movement sensor with LED Orientation light white - Busch-art linear	64765-44G	1	piece
2CKA006800A3145	Busch-Comfort switch® flex Control Element Movement sensor with LED Orientation light white - Busch-art linear	64765-44M	1	piece
2CKA006800A3147	Busch-Comfort switch® flex Control Element Movement sensor with LED Orientation light black - Busch-art linear	64765-45M	1	piece
2CKA001710A4170	Intermediate Ring for cover plates Busch- Balance® SI 1-gang white - Busch-art linear	1747 BSI-44G	1	piece

2CKA001710A4171	Intermediate Ring for cover plates Busch-Balance® SI 1-gang white - Busch-art linear	1747 BSI-44M	1	piece
2CKA001710A4173	Intermediate Ring for cover plates Busch-Balance® SI 1-gang black - Busch-art linear	1747 BSI-45M	1	piece
2CKA001719A0179	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1-gang with Sealing Ring white - Busch-art linear	2518-WD-44G	1	piece
2CKA001719A0180	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1-gang with Sealing Ring white - Busch-art linear	2518-WD-44M	1	piece
2CKA001719A0182	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1-gang with Sealing Ring black - Busch-art linear	2518-WD-45M	1	piece
2CKA001710A4174	Cover plate 50x50 mm for 1746/10-44G data connection housing white - Busch-art linear		1	piece
2CKA001710A4175	Cover plate 50x50 mm for 1746/10-44M data connection housing white - Busch-art linear		1	piece
2CKA001710A4177	Cover plate 50x50 mm for 1746/10-45M data connection housing black - Busch-art linear		1	piece
2CKA001710A4178	Cover plate 50x50 mm for 1746/10-44G-500 data connection housing white - Busch-art linear		1	piece
2CKA001710A4179	Cover plate 50x50 mm for 1746/10-44M-500 data connection housing white - Busch-art linear		1	piece
2CKA001710A4181	Cover plate 50x50 mm for 1746/10-45M-500 data connection housing black - Busch-art linear		1	piece
2CKA001753A9917	Cover plate 50x50 mm with Hinged Lid for data connection housing white - Busch-art linear	1746-44G	1	piece
2CKA001753A9918	Cover plate 50x50 mm with Hinged Lid for data connection housing white - Busch-art linear	1746-44M	1	piece
2CKA001753A9920	Cover plate 50x50 mm with Hinged Lid for data connection housing black - Busch-art linear	1746-45M	1	piece
2CKA001710A4211	Cover plate for Blind cap 11742-44G-gang with Mounting plate white - Busch-art linear		1	piece
2CKA001710A4212	Cover plate for Blind cap 11742-44M-gang with Mounting plate white - Busch-art linear		1	piece

2CKA001710A4214	Cover plate for Blind cap 11742-45M -gang with Mounting plate black - Busch-art linear		1	piece
2CKA001710A4215	Cover plate for Blind cap 11742-44G-500 -gang with Mounting plate white - Busch-art linear		1	piece
2CKA001710A4216	Cover plate for Blind cap 11742-44M-500 -gang with Mounting plate white - Busch-art linear		1	piece
2CKA001710A4218	Cover plate for Blind cap 11742-45M-500 -gang with Mounting plate black - Busch-art linear		1	piece
2CKA001710A4248	Cover plate for Cable outlet 1-gang with Mounting plate; 3-pole screw terminal block white - Busch-art linear	1749-44G	1	piece
2CKA001710A4249	Cover plate for Cable outlet 1-gang with Mounting plate; 3-pole screw terminal block white - Busch-art linear	1749-44M	1	piece
2CKA001710A4251	Cover plate for Cable outlet 1-gang with Mounting plate; 3-pole screw terminal block black - Busch-art linear	1749-45M	1	piece
2CKA001710A4162	Cover plate D-Sub 15-pole 1766-44G 1 gang white - Busch-art linear		1	piece
2CKA001710A4163	Cover plate D-Sub 15-pole 1766-44M 1 gang white - Busch-art linear		1	piece
2CKA001710A4165	Cover plate D-Sub 15-pole 1766-45M 1 gang black - Busch-art linear		1	piece
2CKA001710A4166	Cover plate DSub15Pole 1 1766-44G-500 gang white - Busch-art linear		1	piece
2CKA001710A4167	Cover plate DSub15Pole 1 1766-44M-500 gang white - Busch-art linear		1	piece
2CKA001710A4169	Cover plate DSub15Pole 1 1766-45M-500 gang black - Busch-art linear		1	piece
2CKA001724A4432	Cover plate SAT 3 gang white - Busch-art linear	1743-44G	1	piece
2CKA001724A4433	Cover plate SAT 3 gang white - Busch-art linear	1743-44M	1	piece
2CKA001724A4435	Cover plate SAT 3 gang black - Busch-art linear	1743-45M	1	piece
2CKA001724A4436	Cover plate TV / Radio / SAT 3 gang studio white - Busch-art linear	1743-44G-500	1	piece

2CKA001724A4437	Cover plate TV / Radio / SAT 3 gang studio white matt - Busch-art linear	1743-44M-500	1	piece
2CKA001724A4439	Cover plate TV / Radio / SAT 3 gang black matt - Busch-art linear	1743-45M-500	1	piece
2CKA001724A4440	Cover plate SAT 4 gang white - Busch-art linear	1743/10-04-44G	1	piece
2CKA001724A4441	Cover plate SAT 4 gang white - Busch-art linear	1743/10-04-44M	1	piece
2CKA001724A4443	Cover plate SAT 4 gang black - Busch-art linear	1743/10-04-45M	1	piece
2CKA001710A4219	Cover plate with labelling field for data connection housing 1 gang white - Busch-art linear	1803-44G	1	piece
2CKA001710A4220	Cover plate with labelling field for data connection housing 1 gang white - Busch-art linear	1803-44M	1	piece
2CKA001710A4222	Cover plate with labelling field for data connection housing 1 gang black - Busch-art linear	1803-45M	1	piece
2CKA001710A4223	Cover plate with labelling field for data connection housing 1 gang white - Busch-art linear	1803-44G-500	1	piece
2CKA001710A4224	Cover plate with labelling field for data connection housing 1 gang white - Busch-art linear	1803-44M-500	1	piece
2CKA001710A4226	Cover plate with labelling field for data connection housing 1 gang black - Busch-art linear	1803-45M-500	1	piece
2CKA001710A4227	Cover plate with labelling field for data connection housing 2 gang white - Busch-art linear	1803-02-44G	1	piece
2CKA001710A4228	Cover plate with labelling field for data connection housing 2 gang white - Busch-art linear	1803-02-44M	1	piece
2CKA001710A4230	Cover plate with labelling field for data connection housing 2 gang black - Busch-art linear	1803-02-45M	1	piece
2CKA001710A4231	Cover plate with labelling field for data connection housing 2 gang white - Busch-art linear	1803-02-44G-500	1	piece
2CKA001710A4232	Cover plate with labelling field for data connection housing 2 gang white - Busch-art linear	1803-02-44M-500	1	piece
2CKA001710A4234	Cover plate with labelling field for data connection housing 2 gang black - Busch-art linear	1803-02-45M-500	1	piece

2CKA001724A4444	Cover plate Pilot devices 12533-44G gang white - Busch-art linear		1	piece
2CKA001724A4445	Cover plate Pilot devices 12533-44M gang white - Busch-art linear		1	piece
2CKA001724A4447	Cover plate Pilot devices 12533-45M gang black - Busch-art linear		1	piece
2CKA001724A4455	Cover plate with labelling field for data connection housing white - Busch-art linear	1758-44G	1	piece
2CKA001724A4456	Cover plate with labelling field for data connection housing white - Busch-art linear	1758-44M	1	piece
2CKA001724A4458	Cover plate with labelling field for data connection housing black - Busch-art linear	1758-45M	1	piece
2CKA001753A9922	Cover plate Keystone 1 gang white - Busch-art linear	2561-44G	1	piece
2CKA001753A9923	Cover plate Keystone 1 gang white - Busch-art linear	2561-44M	1	piece
2CKA001753A9925	Cover plate Keystone 1 gang black - Busch-art linear	2561-45M	1	piece
2CKA001710A4235	Cover plate with labelling field Keystone 2 gang white - Busch-art linear	1800-44G	1	piece
2CKA001710A4236	Cover plate with labelling field Keystone 2 gang white - Busch-art linear	1800-44M	1	piece
2CKA001710A4238	Cover plate with labelling field Keystone 2 gang black - Busch-art linear	1800-45M	1	piece
2CKA001753A9926	Cover plate Keystone 2 gang white - Busch-art linear	2561-02-44G	1	piece
2CKA001753A9927	Cover plate Keystone 2 gang white - Busch-art linear	2561-02-44M	1	piece
2CKA001753A9929	Cover plate Keystone 2 gang black - Busch-art linear	2561-02-45M	1	piece
2CKA001724A4448	Cover plate XLR 1 gang white - Busch-art linear	2553-44G	1	piece
2CKA001724A4449	Cover plate XLR 1 gang white - Busch-art linear	2553-44M	1	piece
2CKA001724A4451	Cover plate XLR 1 gang black - Busch-art linear	2553-45M	1	piece
2CKA001582A0441	Handicapped toilet signal set Busch-Infoline® studio white - Busch-art linear	1510 UC-44G-101	1	piece

2CKA001582A0453	Handicapped toilet signal 1510 UJ-44G set Busch-Infoline® with storage battery buffering studio white - Busch-art linear		1	piece
2CKA001582A0443	Cover plate Busch-Infoline® Alarm studio white - Busch-art linear	1573 CN-44G	1	piece
2CKA001582A0445	Cover plate with labelling field Busch-Infoline® Push button 1 gang studio white - Busch-art linear	1571 CN-44G	1	piece
2CKA001582A0447	Cover plate with labelling field Busch-Infoline® Push button / Clear 1 gang studio white - Busch-art linear	1572 CN-44G	1	piece
2CKA001582A0449	Cover plate with labelling field Busch-Infoline® studio white - Busch-art linear	1575 CN-44G	1	piece
2CKA001582A0451	Cover plate Busch-Infoline® studio white - Busch-art linear	1576 CN-44G	1	piece
2CKA001582A0454	Cover plate Busch-Infoline® telephone connector boxes (VDo) white - Busch-art linear	1745-44G	1	piece
2CKA001753A0244	Insert Busch-Infolicht® LED / White studio white - Busch-art linear	1756 U-44G	1	piece
2CKA001753A0245	Insert Busch-Infolicht® LED / White studio white matt - Busch-art linear	1756 U-44M	1	piece
2CKA001753A0247	Insert Busch-Infolicht® LED / White black matt - Busch-art linear	1756 U-45M	1	piece
2CKA006115A0509	Keypad KNX (TP)	KK/U4.70.11	1	piece
2CKA006115A0510	Keypad white - Trevion	KK/U4.70.1	1	piece
2TMA310010B0006	Touch Display 1gang Twisted Pair Wiring glass black - Busch-art linear	SD/U12.70.11-4015	1	piece
2TMA310011B0004	Touch Display 2.4 in "glassSD/U12.70.1-4015 black - Trevion		1	piece
2CKA006199A0518	Cover plate None white - Busch-art linear	LFW/A.0.70.11-CKL	1	piece
2CKA006199A0519	Cover plate None studio white - Trevion	LFW/A.0.70.1-CKL	1	piece
2CKA006199A0024	Cover plate None studio white - Busch-art linear	LFW/A.0.70.11-CK	1	piece
2CKA006199A0025	Cover plate None studio white - Trevion	LFW/A.0.70.1-CK	1	piece
2CKA006199A0026	Cover plate studio white - Busch-art linear	LFW/A.1.70.11-44G	1	piece
2CKA006199A0027	Cover plate studio white - Busch-art linear	LFW/A.2.70.11-44G	1	piece
2CKA006199A0028	Cover plate studio white - Busch-art linear	LFW/A.3.70.11-44G	1	piece

2CKA006199A0029	Cover plate studio white - LFW/A.4.70.11-44G Busch-art linear		1	piece
2CKA006199A0030	Cover plate Symbol "light" LFB/A.1.70.11-44G studio white - Busch-art linear		1	piece
2CKA006199A0031	Cover plate Symbol "venetian blind" studio white - Busch-art linear	LFJ/A.1.70.11-44G	1	piece
2CKA006199A0032	Cover plate Symbol "scene" studio white - Busch-art linear	LFS/A.1.70.11-44G	1	piece
2CKA006199A0378	Cover plate Symbol "dimming" studio white - Busch-art linear	LFDW/A.1.70.11-44G	1	piece
2CKA006199A0379	Cover plate Symbol "venetian blind" studio white - Busch-art linear	LFJW/A.1.70.11-44G	1	piece
2CKA006199A0380	Cover plate Symbol "arrows" studio white - Busch-art linear	LFAW/A.1.70.11-44G	1	piece
2CKA006199A0381	Cover plate Symbol "light" LFBT/A.2.70.11-44G studio white - Busch-art linear		1	piece
2CKA006199A0382	Cover plate Symbol "venetian blind" studio white - Busch-art linear	LFJT/A.2.70.11-44G	1	piece
2CKA006199A0383	Cover plate Symbol "scene" studio white - Busch-art linear	LFST/A.2.70.11-44G	1	piece
2CKA006199A0384	Cover plate Symbol "arrows/venetian blind" and "dimmer" studio white - Busch-art linear	LFDW/A.2.70.11-44G	1	piece
2CKA006199A0385	Cover plate Symbol "arrows" studio white - Busch-art linear	LFAW/A.2.70.11-44G	1	piece
2CKA006199A0386	Cover plate Symbols "music control" studio white - Busch-art linear	LFMW/A.4.70.11-44G	1	piece
2CKA006199A0387	Cover plate studio white matt - Busch-art linear	LFW/A.1.70.11-44M	1	piece
2CKA006199A0388	Cover plate studio white matt - Busch-art linear	LFW/A.2.70.11-44M	1	piece
2CKA006199A0389	Cover plate studio white matt - Busch-art linear	LFW/A.3.70.11-44M	1	piece
2CKA006199A0390	Cover plate studio white matt - Busch-art linear	LFW/A.4.70.11-44M	1	piece
2CKA006199A0391	Cover plate Symbol "light" LFB/A.1.70.11-44M studio white matt - Busch -art linear		1	piece
2CKA006199A0392	Cover plate Symbol "venetian blind" studio white matt - Busch-art linear	LFJ/A.1.70.11-44M	1	piece
2CKA006199A0393	Cover plate Symbol "scene" studio white matt - Busch-art linear	LFS/A.1.70.11-44M	1	piece

2CKA006199A0394	Cover plate Symbol "dimming" studio white matt - Busch-art linear	LFDW/A.1.70.11-44M	1	piece
2CKA006199A0395	Cover plate Symbol "venetian blind" studio white matt - Busch-art linear	LFJW/A.1.70.11-44M	1	piece
2CKA006199A0396	Cover plate Symbol "arrows" studio white matt - Busch-art linear	LEAW/A.1.70.11-44M	1	piece
2CKA006199A0397	Cover plate Symbol "light" LFBT/A.2.70.11-44M studio white matt - Busch-art linear	LFBT/A.2.70.11-44M	1	piece
2CKA006199A0398	Cover plate Symbol "venetian blind" studio white matt - Busch-art linear	LFJT/A.2.70.11-44M	1	piece
2CKA006199A0399	Cover plate Symbol "scene" studio white matt - Busch-art linear	LFST/A.2.70.11-44M	1	piece
2CKA006199A0400	Cover plate Symbol "arrows/venetian blind" and "dimmer" studio white matt - Busch-art linear	LFDW/A.2.70.11-44M	1	piece
2CKA006199A0401	Cover plate Symbol "arrows" studio white matt - Busch-art linear	LEAW/A.2.70.11-44M	1	piece
2CKA006199A0402	Cover plate Symbols "music control" studio white matt - Busch-art linear	LFMW/A.4.70.11-44M	1	piece
2CKA006199A0419	Cover plate black matt - Busch-art linear	LEW/A.1.70.11-45M	1	piece
2CKA006199A0420	Cover plate black matt - Busch-art linear	LEW/A.2.70.11-45M	1	piece
2CKA006199A0421	Cover plate black matt - Busch-art linear	LEW/A.3.70.11-45M	1	piece
2CKA006199A0422	Cover plate black matt - Busch-art linear	LEW/A.4.70.11-45M	1	piece
2CKA006199A0423	Cover plate Symbol "light" LFB/A.1.70.11-45M black matt - Busch-art linear	LFB/A.1.70.11-45M	1	piece
2CKA006199A0424	Cover plate Symbol "venetian blind" black matt - Busch-art linear	LFJ/A.1.70.11-45M	1	piece
2CKA006199A0425	Cover plate Symbol "scene" black matt - Busch-art linear	LFS/A.1.70.11-45M	1	piece
2CKA006199A0426	Cover plate Symbol "dimming" black matt - Busch-art linear	LFDW/A.1.70.11-45M	1	piece
2CKA006199A0427	Cover plate Symbol "venetian blind" black matt - Busch-art linear	LFJW/A.1.70.11-45M	1	piece
2CKA006199A0428	Cover plate Symbol "arrows" black matt - Busch-art linear	LEAW/A.1.70.11-45M	1	piece

2CKA006199A0429	Cover plate Symbol "light" LFBT/A.2.70.11-45M black matt - Busch-art linear		1	piece
2CKA006199A0430	Cover plate Symbol "venetian blind" black matt - Busch-art linear	LFJT/A.2.70.11-45M	1	piece
2CKA006199A0431	Cover plate Symbol "scene" black matt - Busch-art linear	LFST/A.2.70.11-45M	1	piece
2CKA006199A0432	Cover plate Symbol "arrows/venetian blind" and "dimmer" black matt - Busch-art linear	LFDW/A.2.70.11-45M	1	piece
2CKA006199A0433	Cover plate Symbol "arrows" black matt - Busch-art linear	LFAW/A.2.70.11-45M	1	piece
2CKA006199A0434	Cover plate Symbols "music control" black matt - Busch-art linear	LFMW/A.4.70.11-45M	1	piece
2CKA006199A0435	Cover plate studio white - Trevion	LFW/A.1.70.1-44G	1	piece
2CKA006199A0436	Cover plate studio white - Trevion	LFW/A.2.70.1-44G	1	piece
2CKA006199A0437	Cover plate studio white - Trevion	LFW/A.3.70.1-44G	1	piece
2CKA006199A0438	Cover plate studio white - Trevion	LFW/A.4.70.1-44G	1	piece
2CKA006199A0439	Cover plate Symbol "light" LFB/A.1.70.1-44G studio white - Trevion		1	piece
2CKA006199A0440	Cover plate Symbol "venetian blind" studio white - Trevion	LFJ/A.1.70.1-44G	1	piece
2CKA006199A0441	Cover plate Symbol "scene" studio white - Trevion	LFS/A.1.70.1-44G	1	piece
2CKA006199A0442	Cover plate Symbol "dimming" studio white - Trevion	LFDW/A.1.70.1-44G	1	piece
2CKA006199A0443	Cover plate Symbol "venetian blind" studio white - Trevion	LFJW/A.1.70.1-44G	1	piece
2CKA006199A0444	Cover plate Symbol "arrows" studio white - Trevion	LFAW/A.1.70.1-44G	1	piece
2CKA006199A0445	Cover plate Symbol "light" LFBT/A.2.70.1-44G studio white - Trevion		1	piece
2CKA006199A0446	Cover plate Symbol "venetian blind" studio white - Trevion	LFJT/A.2.70.1-44G	1	piece
2CKA006199A0447	Cover plate Symbol "scene" studio white - Trevion	LFST/A.2.70.1-44G	1	piece
2CKA006199A0448	Cover plate Symbol "arrows/venetian blind" and "dimmer" studio white - Trevion	LFDW/A.2.70.1-44G	1	piece

2CKA006199A0449	Cover plate Symbol "arrows" studio white - Trevion	LFAW/A.2.70.1-44G	1	piece
2CKA006199A0450	Cover plate Symbols "music control" studio white - Trevion	LFMW/A.4.70.1-44G	1	piece
2CKA006199A0451	Cover plate studio white matt - Trevion	LFW/A.1.70.1-44M	1	piece
2CKA006199A0452	Cover plate studio white matt - Trevion	LFW/A.2.70.1-44M	1	piece
2CKA006199A0453	Cover plate studio white matt - Trevion	LFW/A.3.70.1-44M	1	piece
2CKA006199A0454	Cover plate studio white matt - Trevion	LFW/A.4.70.1-44M	1	piece
2CKA006199A0455	Cover plate Symbol "light" studio white matt - Trevion	LFB/A.1.70.1-44M	1	piece
2CKA006199A0456	Cover plate Symbol "venetian blind" studio white matt - Trevion	LFJ/A.1.70.1-44M	1	piece
2CKA006199A0457	Cover plate Symbol "scene" studio white matt - Trevion	LFS/A.1.70.1-44M	1	piece
2CKA006199A0458	Cover plate Symbol "dimming" studio white matt - Trevion	LFDW/A.1.70.1-44M	1	piece
2CKA006199A0459	Cover plate Symbol "venetian blind" studio white matt - Trevion	LFJW/A.1.70.1-44M	1	piece
2CKA006199A0460	Cover plate Symbol "arrows" studio white matt - Trevion	LFAW/A.1.70.1-44M	1	piece
2CKA006199A0461	Cover plate Symbol "light" studio white matt - Trevion	LFBT/A.2.70.1-44M	1	piece
2CKA006199A0462	Cover plate Symbol "venetian blind" studio white matt - Trevion	LFJT/A.2.70.1-44M	1	piece
2CKA006199A0463	Cover plate Symbol "scene" studio white matt - Trevion	LFST/A.2.70.1-44M	1	piece
2CKA006199A0464	Cover plate Symbol "arrows/venetian blind" and "dimmer" studio white matt - Trevion	LFDW/A.2.70.1-44M	1	piece
2CKA006199A0465	Cover plate Symbol "arrows" studio white matt - Trevion	LFAW/A.2.70.1-44M	1	piece
2CKA006199A0466	Cover plate Symbols "music control" studio white matt - Trevion	LFMW/A.4.70.1-44M	1	piece
2CKA006199A0483	Cover plate black matt - Trevion	LFW/A.1.70.1-45M	1	piece
2CKA006199A0484	Cover plate black matt - Trevion	LFW/A.2.70.1-45M	1	piece
2CKA006199A0485	Cover plate black matt - Trevion	LFW/A.3.70.1-45M	1	piece

2CKA006199A0486	Cover plate black matt - Trevion	LFW/A.4.70.1-45M	1	piece
2CKA006199A0487	Cover plate Symbol "light" black matt - Trevion	LFB/A.1.70.1-45M	1	piece
2CKA006199A0488	Cover plate Symbol "venetian blind" black matt - Trevion	LFJ/A.1.70.1-45M	1	piece
2CKA006199A0489	Cover plate Symbol "scene" black matt - Trevion	LFS/A.1.70.1-45M	1	piece
2CKA006199A0490	Cover plate Symbol "dimming" black matt - Trevion	LFDW/A.1.70.1-45M	1	piece
2CKA006199A0491	Cover plate Symbol "venetian blind" black matt - Trevion	LFJW/A.1.70.1-45M	1	piece
2CKA006199A0492	Cover plate Symbol "arrows" black matt - Trevion	LFAW/A.1.70.1-45M	1	piece
2CKA006199A0493	Cover plate Symbol "light" black matt - Trevion	LFBT/A.2.70.1-45M	1	piece
2CKA006199A0494	Cover plate Symbol "venetian blind" black matt - Trevion	LFJT/A.2.70.1-45M	1	piece
2CKA006199A0495	Cover plate Symbol "scene" black matt - Trevion	LFST/A.2.70.1-45M	1	piece
2CKA006199A0496	Cover plate Symbol "arrows/venetian blind" and "dimmer" black matt - Trevion	LFDW/A.2.70.1-45M	1	piece
2CKA006199A0497	Cover plate Symbol "arrows" black matt - Trevion	LFAW/A.2.70.1-45M	1	piece
2CKA006199A0498	Cover plate Symbols "music control" black matt - Trevion	LFMW/A.4.70.1-45M	1	piece

## Categories

Products > Low Voltage Products and Systems > Building and Home Automation Solutions > free@home > User Operation > Frames

Products > Low Voltage Products and Systems > Building and Home Automation Solutions > KNX > User Operation > Frames

Products > Low Voltage Products and Systems > Wiring Accessories - Light Switch Ranges > Frames

