

 



---

 PRODUCT-DETAILS

## 8110

### Insert Intermediate switch for 1 rocker, LED exchangeable/ 10 A

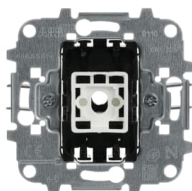


---

**General Information**

<b>Extended Product Type:</b>	8110
<b>Product ID:</b>	2CLA811000A1001
<b>EAN:</b>	8427238016481
<b>Catalog Description:</b>	Insert Intermediate switch for 1 rocker, LED exchangeable/ 10 A
<b>Long Description:</b>	<p>Rated voltage: 110 - 250 Vac          Rated current: 10AX          Screwless terminals          Included: fixing claws          Optional: locator LED lamp 6192 BL (230 Vac)          Rocker code: 8901, 8901.2, 8901.3, 8901.4, 8501, 8501.2, 8501.3, 8501.4, 8601, 8601.3, 8401, 8401.2, 8401.3, 8401.4, 8201, 8201.2, 8201.3, 8201.4, 8201.9</p>
<b>Display Name:</b>	8110

---

**Installation**

<b>Instructions and Manuals:</b>	2CLX810109A1001
<b>Mounting Type:</b>	Flush Mounted
<b>Type of Fastening:</b>	Screw

---

## Environmental

---

<b>Ambient Air Temperature:</b>	Operation -5 ... +35 °C Storage -5 ... +50 °C
<b>Degree of Protection:</b>	IP20

---



---

## Technical

---

<b>Data Sheet, Technical Information:</b>	9AKK107046A0356
<b>Function:</b>	Function lighting: Orientation
<b>Number of Rocker Switches:</b>	1
<b>Wiring Configuration:</b>	Intermediate switch
<b>Actuator Type:</b>	Rocker/button
<b>Connection Type:</b>	Plug Clamp
<b>Lamp Type:</b>	LED exchangeable
<b>Illumination:</b>	Optional
<b>Accessories Available:</b>	Yes
<b>Number of Batteries:</b>	0

---



---

## Electrical

---

<b>Rated Voltage (U<sub>r</sub>):</b>	250 V
<b>Rated Current (I<sub>n</sub>):</b>	10 A
<b>Maximum Switching Current:</b>	Fluorescent Lamps 10

---



---

## Design

---

<b>Design Range:</b>	Platform 8100 Alba Sky Niessen Alter Vega Vega Vega Waterproof Arco
<b>Label Space Provided:</b>	Without Label Space

---



---

## Dimensions

---

<b>Product Net Width:</b>	0.149 m
<b>Product Net Height:</b>	0.078 m
<b>Product Net Depth / Length:</b>	0.225 m
<b>Product Net Weight:</b>	0.061 kg

---

---

## Ordering

---

Replaced Product ID (OLD): 2CL0811000

---



---

## Material Compliance

---

RoHS Declaration: 2CLC811000A1001;2CLC00000003458

RoHS Information: Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019

REACH Declaration: 2CLC00000008210

REACH Information: False - does not contain substances > 0.1 mass percentage

REACH Date: 20251231

Conflict Minerals Reporting Template (CMRT): 9AKK108468A3363

WEEE Category: 5. Small Equipment (No External Dimension More Than 50 cm)

WEEE B2C / B2B: Business To Consumer

---



---

## Certificates and Declarations

---

Declaration of Conformity - CE: 9AKK106713A1744

---

EU Data Act Applicability and Compliance: Not Applicable

---



---

## External Classifications and Standards

---

ETIM 9: EC001590 - Installation switch

ETIM 10: EC001590 - Installation switch

UNSPSC: 39122200

---



---

## Accessories

---

Identifier	Description	Type	Qty	Unit Of Measure
2CLA820100A1101	Rocker Without imprint for Switch/push button, Single rocker Alpine white - Arco	8201 BA	1	piece
2CLA820120A1101	Rocker Characters 0 and 1 8201.2 BA for Switch/push button, Single rocker Alpine white - Arco	8201.2 BA	1	piece
2CLA820130A1101	Rocker Without imprint for Switch/push button, Single rocker Alpine white - Arco	8201.3 BA	1	piece

---

2CLA820140A1101	Rocker Characters 0 and 1 for Switch/push button, Single rocker Alpine white - Arco	8201.4 BA	1	piece
2CLA820190A1101	Rocker Without imprint for Switch/push button, Single rocker Alpine white - Arco	8201.9 BA	1	piece
2CLA840130A1001	Rocker Without imprint for Switch/push button, Single rocker Cream white - Olas	8401.3 BL	1	piece
2CLA840130A1401	Rocker Without imprint for Switch/push button, Single rocker Titanium - Olas	8401.3 TT	1	piece
2CLA840140A1001	Rocker Characters 0 and 1 for Switch/push button, Single rocker Cream white - Olas	8401.4 BL	1	piece
2CLA840140A1401	Rocker Characters 0 and 1 for Switch/push button, Single rocker Titanium - Olas	8401.4 TT	1	piece
2CLA840100A1001	Rocker Without imprint for Switch/push button, Single rocker Cream white - Olas	8401 BL	1	piece
2CLA840100A1401	Rocker Without imprint for Switch/push button, Single rocker Titanium - Olas	8401 TT	1	piece
2CLA840120A1001	Rocker Characters 0 and 1 for Switch/push button, Single rocker Cream white - Olas	8401.2 BL	1	piece
2CLA840120A1401	Rocker Characters 0 and 1 for Switch/push button, Single rocker Titanium - Olas	8401.2 TT	1	piece
2CLA841000A1466	Rocker switch Intermediate switch with LED exchangeable Titanium - Olas	B8410 TT	1	piece
2CLA850100A1101	Rocker Without imprint for Switch/push button, Single rocker White - Sky Niessen	8501 BL	1	piece
2CLA850100A1301	Rocker Without imprint for Switch/push button, Single rocker Silver - Sky Niessen	8501 PL	1	piece
2CLA850100A1401	Rocker Without imprint for Switch/push button, Single rocker Stainless steel - Sky Niessen	8501 AI	1	piece
2CLA850100A1501	Rocker Without imprint for Switch/push button, Single rocker Black - Sky Niessen	8501 NS	1	piece

2CLA850130A2501	Rocker Without imprint for Switch/push button, Single rocker Black Glass - Sky Niessen	8501.3 CN	1	piece
2CLA850100A2101	Rocker Without imprint for Switch/push button, Single rocker White Glass - Sky Niessen	8501 CB	1	piece
2CLA850140A1101	Rocker Characters 0 and 1 for Switch/push button, Single rocker White - Sky Niessen	8501.4 BL	1	piece
2CLA850140A1301	Rocker Characters 0 and 1 for Switch/push button, Single rocker Silver - Sky Niessen	8501.4 PL	1	piece
2CLA850100A2501	Rocker Without imprint for Switch/push button, Single rocker Black Glass - Sky Niessen	8501 CN	1	piece
2CLA850120A1101	Rocker Characters 0 and 1 for Switch/push button, Single rocker White - Sky Niessen	8501.2 BL	1	piece
2CLA850140A1401	Rocker Characters 0 and 1 for Switch/push button, Single rocker Stainless steel - Sky Niessen	8501.4 AI	1	piece
2CLA850120A1301	Rocker Characters 0 and 1 for Switch/push button, Single rocker Silver - Sky Niessen	8501.2 PL	1	piece
2CLA850120A1501	Rocker Characters 0 and 1 for Switch/push button, Single rocker Black - Sky Niessen	8501.2 NS	1	piece
2CLA850100A1201	Rocker Without imprint for Switch/push button, Single rocker Gold - Sky Niessen	8501 OE	1	piece
2CLA850130A1101	Rocker Without imprint for Switch/push button, Single rocker White - Sky Niessen	8501.3 BL	1	piece
2CLA850130A1301	Rocker Without imprint for Switch/push button, Single rocker Silver - Sky Niessen	8501.3 PL	1	piece
2CLA850120A1201	Rocker Characters 0 and 1 for Switch/push button, Single rocker Gold - Sky Niessen	8501.2 OE	1	piece
2CLA850130A1401	Rocker Without imprint for Switch/push button, Single rocker Stainless steel - Sky Niessen	8501.3 AI	1	piece
2CLA850100A1901	Rocker Without imprint for Switch/push button, Single rocker Green - Sky Niessen	8501 CM	1	piece

2CLA850130A1501	Rocker Without imprint for Switch/push button, Single rocker Black - Sky Niessen	8501.3 NS	1	piece
2CLA850130A2101	Rocker Without imprint for Switch/push button, Single rocker White Glass - Sky Niessen	8501.3 CB	1	piece
2CLA850120A1401	Rocker Characters 0 and 1 for Switch/push button, Single rocker Stainless steel - Sky Niessen	8501.2 AI	1	piece
2CLA850100A6201	Rocker Without imprint for Switch/push button, Single rocker Dune - Sky Niessen	8501 DN	1	piece
2CLA850140A1501	Rocker Characters 0 and 1 for Switch/push button, Single rocker Black - Sky Niessen	8501.4 NS	1	piece
2CLA850130A1201	Rocker Without imprint for Switch/push button, Single rocker Gold - Sky Niessen	8501.3 OE	1	piece
2CLA850100A6301	Rocker Without imprint for Switch/push button, Single rocker Taupe - Sky Niessen	8501 TP	1	piece
2CLA850140A1201	Rocker Characters 0 and 1 for Switch/push button, Single rocker Gold - Sky Niessen	8501.4 OE	1	piece
2CLA850140A1901	Rocker Characters 0 and 1 for Switch/push button, Single rocker Green - Sky Niessen	8501.4 CM	1	piece
2CLA850120A1901	Rocker Characters 0 and 1 for Switch/push button, Single rocker Green - Sky Niessen	8501.2 CM	1	piece
2CLA850130A1901	Rocker Without imprint for Switch/push button, Single rocker Green - Sky Niessen	8501.3 CM	1	piece
2CLA850130A6301	Rocker Without imprint for Switch/push button, Single rocker Taupe - Sky Niessen	8501.3 TP	1	piece
2CLA850120A6301	Rocker Characters 0 and 1 for Switch/push button, Single rocker Taupe - Sky Niessen	8501.2 TP	1	piece
2CLA850120A6201	Rocker Characters 0 and 1 for Switch/push button, Single rocker Dune - Sky Niessen	8501.2 DN	1	piece
2CLA850130A6201	Rocker Without imprint for Switch/push button, Single rocker Dune - Sky Niessen	8501.3 DN	1	piece

2CLA850140A6201	Rocker Characters 0 and 1 8501.4 DN for Switch/push button, Single rocker Dune - Sky Niessen		1	piece
2CLA850140A6301	Rocker Characters 0 and 1 8501.4 TP for Switch/push button, Single rocker Taupe - Sky Niessen		1	piece
2CLA870100A1101	Rocker Without imprint 8701 BA for Switch/push button, Single rocker Alpine white - Arco		1	piece
2CLA870120A1101	Rocker Characters 0 and 1 8701.2 BA for Switch/push button, Single rocker Alpine white - Arco		1	piece
2CLA870130A1101	Rocker Without imprint 8701.3 BA for Switch/push button, Single rocker Alpine white - Arco		1	piece
2CLA870140A1101	Rocker Characters 0 and 1 8701.4 BA for Switch/push button, Single rocker Alpine white - Arco		1	piece
2CLA880100A1501	Rocker None for Switch/push button, One-part rocker Black - Vega 8801 NT		1	piece
2CLA880108A1001	Rocker None for Switch/push button, One-part rocker White - Alter Vega 8801.08 BT		1	piece
2CLA880100A1101	Rocker None for Switch/push button, One-part rocker White - Vega 8801 BL		1	piece
2CLA880100A1001	Rocker None for Switch/push button, One-part rocker White - Vega 8801 BT		1	piece
2CLA880128A1501	Rocker Characters 0 and 1 8801.28 NT for Switch/push button, One-part rocker Black - Alter Vega		1	piece
2CLA880130A1101	Rocker None for Switch/push button, One-part rocker White - Vega 8801.3 BL		1	piece
2CLA880108A1501	Rocker None for Switch/push button, One-part rocker Black - Alter Vega 8801.08 NT		1	piece
2CLA880128A1101	Rocker Characters 0 and 1 8801.28 BL for Switch/push button, One-part rocker White - Alter Vega		1	piece
2CLA880130A1501	Rocker None for Switch/push button, One-part rocker Black - Vega 8801.3 NT		1	piece
2CLA880128A1001	Rocker Characters 0 and 1 8801.28 BT for Switch/push button, One-part rocker White - Alter Vega		1	piece

 
 
2CLA880120A1501	Rocker Characters 0 and 1 for Switch/push button, One-part rocker Black - Vega	8801.2 NT	1	piece
2CLA880108A1101	Rocker None for Switch/push button, One- part rocker White - Alter Vega	8801.08 BL	1	piece
2CLA880120A1001	Rocker Characters 0 and 1 for Switch/push button, One-part rocker White - Vega	8801.2 BT	1	piece
2CLA880120A1101	Rocker Characters 0 and 1 for Switch/push button, One-part rocker White - Vega	8801.2 BL	1	piece
2CLA880138A1001	Rocker None for Switch/push button, One- part rocker White - Alter Vega	8801.38 BT	1	piece
2CLA880130A1001	Rocker None for Switch/push button, One- part rocker White - Vega	8801.3 BT	1	piece
2CLA880148A1501	Rocker Characters 0 and 1 for Switch/push button, One-part rocker Black - Alter Vega	8801.48 NT	1	piece
2CLA880138A1101	Rocker None for Switch/push button, One- part rocker White - Alter Vega	8801.38 BL	1	piece
2CLA880148A1001	Rocker Characters 0 and 1 for Switch/push button, One-part rocker White - Alter Vega	8801.48 BT	1	piece
2CLA880148A1101	Rocker Characters 0 and 1 for Switch/push button, One-part rocker White - Alter Vega	8801.48 BL	1	piece
2CLA880140A1501	Rocker Characters 0 and 1 for Switch/push button, One-part rocker Black - Vega	8801.4 NT	1	piece
2CLA880138A1501	Rocker None for Switch/push button, One- part rocker Black - Alter Vega	8801.38 NT	1	piece
2CLA880140A1101	Rocker Characters 0 and 1 for Switch/push button, One-part rocker White - Vega	8801.4 BL	1	piece
2CLA880140A1001	Rocker Characters 0 and 1 for Switch/push button, One-part rocker White - Vega	8801.4 BT	1	piece
2CLA890100A1001	Cover plate Without imprint for Switch/push button, Single rocker White - Alba	8901 BT	1	piece

 
2CLA890100A1501	Cover plate Without imprint for Switch/push button, Single rocker Black - Alba	8901 NT	1	piece
2CLA890100A1101	Cover plate Without imprint for Switch/push button, Single rocker White - Alba	8901 BL	1	piece
2CLA890130A1501	Cover plate Without imprint for Switch/push button, Single rocker Black - Alba	8901.3 NT	1	piece
2CLA890120A1101	Cover plate Characters 0 and 1 for Switch/push button, Single rocker White - Alba	8901.2 BL	1	piece
2CLA890120A1501	Cover plate Characters 0 and 1 for Switch/push button, Single rocker Black - Alba	8901.2 NT	1	piece
2CLA890120A1001	Cover plate Characters 0 and 1 for Switch/push button, Single rocker White - Alba	8901.2 BT	1	piece
2CLA890130A1001	Cover plate Without imprint for Switch/push button, Single rocker White - Alba	8901.3 BT	1	piece
2CLA890120A1801	Cover plate Characters 0 and 1 for Switch/push button, Single rocker Grey - Alba	8901.2 GR	1	piece
2CLA890100A1801	Cover plate Without imprint for Switch/push button, Single rocker Grey - Alba	8901 GR	1	piece
2CLA890109A1001	Rocker None for Switch/push button, One-part rocker White - Alba Infinity	8901.09 BT	1	piece
2CLA890109A1101	Rocker None for Switch/push button, One-part rocker White - Alba Infinity	8901.09 BL	1	piece
2CLA890130A1801	Cover plate Without imprint for Switch/push button, Single rocker Grey - Alba	8901.3 GR	1	piece
2CLA890109A1801	Rocker None for Switch/push button, One-part rocker Grey - Alba Infinity	8901.09 GR	1	piece
2CLA890109A1501	Rocker None for Switch/push button, One-part rocker Black - Alba Infinity	8901.09 NT	1	piece
2CLA890140A1801	Cover plate Characters 0 and 1 for Switch/push button, Single rocker Grey - Alba	8901.4 GR	1	piece

2CLA890140A1001	Cover plate Characters 0 and 1 for Switch/push button, Single rocker White - Alba	8901.4 BT	1	piece
2CLA890140A1501	Cover plate Characters 0 and 1 for Switch/push button, Single rocker Black - Alba	8901.4 NT	1	piece
2CLA890140A1101	Cover plate Characters 0 and 1 for Switch/push button, Single rocker White - Alba	8901.4 BL	1	piece
2CLA890130A1101	Cover plate Without imprint for Switch/push button, Single rocker White - Alba	8901.3 BL	1	piece
2CLA890139A1501	Rocker None for Switch/push button, One-part rocker Black - Alba Infinity	8901.39 NT	1	piece
2CLA890139A1101	Rocker None for Switch/push button, One-part rocker White - Alba Infinity	8901.39 BL	1	piece
2CLA890139A1001	Rocker None for Switch/push button, One-part rocker White - Alba Infinity	8901.39 BT	1	piece
2CLA890139A1801	Rocker None for Switch/push button, One-part rocker Grey - Alba Infinity	8901.39 GR	1	piece

## Categories

Products > Low Voltage Products and Systems > Wiring Accessories - Light Switch Ranges > Flush Mounted Inserts > Mechanical Inserts

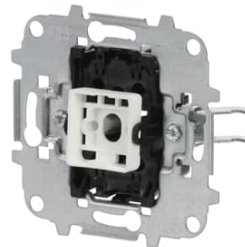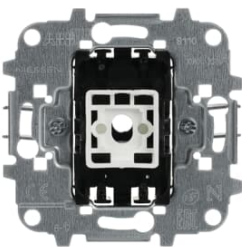

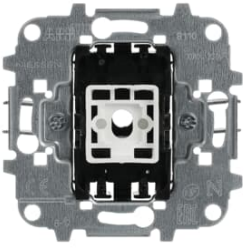

360°